

AUTA K80 Telephone




Terminals

- 3 Speech Out (Mic)**
- 12 Call**
- 4 Common**
- 10 Lock**
- 7 Speech In (Speaker)**



Note : Lack of hang up switch, speech lines are cut off by a twin reed switch mounted in the receiver (activated by a magnet). Lock release button shorts across the bare crimps in 4 & 10 (Simples !)

IMPORTANT NOTE :

- 1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).
- 2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.
- 3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

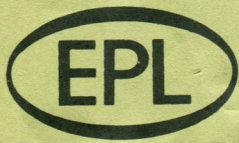

WIRING INSTRUCTION FOR DOOR ENTRY SYSTEMS

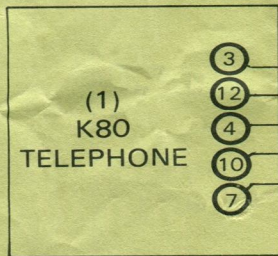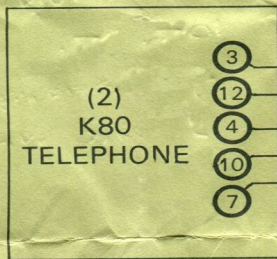

3-4-10-7 ARE COMMON TO ALL PHONES.
12 IS BUZZING LINE TO EACH PHONE
FROM ITS RESPECTIVE PUSH.
POWER SUPPLY SHOULD BE MOUNTED
AS NEAR AS POSSIBLE TO FRONT PANEL.
IF THIS CANNOT BE DONE DOUBLE UP ON
CABLE ON + & - FROM POWER SUPPLY.
UP TO 100m OF CABLE CAN BE USED ON
THIS SYSTEM WITHOUT ANY PROBLEM.

