

Fermax Loft 3399 (UNIVERSAL)



Terminals

- | | |
|---|---------------------|
| 1 | Lock |
| 2 | Speech Out (Mic) |
| 3 | Common |
| 6 | Speech In (Speaker) |
| 4 | Call |

IMPORTANT NOTE :

1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).

2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.

3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

FERMAX
Cod. 97397c V 06_11



Téléfono - Telephone - Poste - Telefon



LOFT

UNIVERSAL - UNIVERSEL


Ref.3399

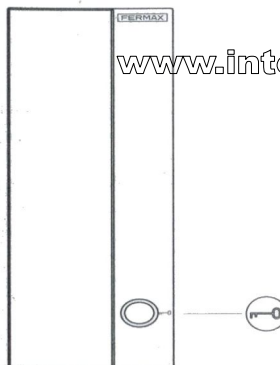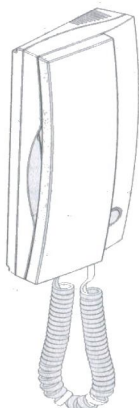

www.intercomsrus.com


www.intercomsrus.com

EN BUTTONS

 EN Lock release button: press this button to activate the electric lock.

EN CONNECTIONS

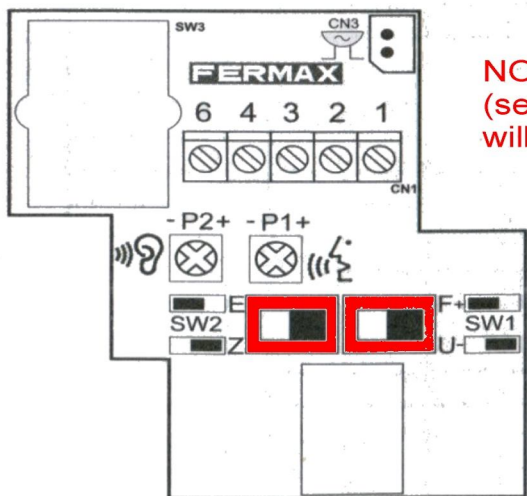

EN The Loft Universal telephone can be easily and quickly installed. Just connect the terminals matching them with the symbols listed in table.





NOTE : Ensure you set SW1 & SW2 Correctly (see table below) if you do not your handset will 1) Not Ring or 2) Have only 1 way speech







www.intercomsrus.com








- EN :
- 1: Door-opener and microphone supply.
- 2: Telephone Microphone.
- 3: Common earth.
- 4: Call Wire.
- 6: Telephone Speaker.


SW1	U- 	F+ 
	Common ground	Non-common ground

SW2	 Z	 E
	Buzzer call	Electronic call


www.intercomsrus.com

MODEL								<input type="checkbox"/> Z	<input type="checkbox"/> E
FERMAX	LOFT UNIVERSAL	1	2	3	6	4			
ACET		5	10	2	7	9		Z	
	701	7	4	6	3	5		Z	
	901	5	2	3	1	4		Z	
AIPHONE	VC-K	4	2	3	1	B		Z	
ALCAD		1	3	Z/2	4	6		Z	
		1	3	Z/2	4	5		E	
AMPER		D	A	C	B	E		Z	
		F	L	N	M	E		Z	
AMPLIVOX		Z	R	0	T	1		Z	
ARFE		4	1	2	3	V		Z	
ATEA		9/10	2	3	1	4/5		Z	
		2	4	3	1	5		Z	
	U 32079	3	2	5 6	1	7		Z	
	702	3	2	5	1	7		Z	
	8400	9	7	3	1	5		Z	
AUTA	TF89	10	3	4	7	12		Z	
	TF92	10	3	4	7	12		E	
AUTELCO		P5	A	1	B	2		Z	
AXIL		F/8	A/5	G/6	B/4	E/4		Z	
BELL		Z	R	O	T	I		Z	
BITRON	AN0002, AK6010	9	2	6	1	11		Z	
	AN0002, AK6010	9	2	6	1	C7		E	
BOGEN		T	1	3	2	6		Z	
BPT	AZ / FD	2	1	4	5	3		Z	
	YC/251	2	1	4	5	6		E	
BTICINO		1	8	10/11/7	9	14		Z	
CENTRAMATIC		4	2	1	3	5		Z	
		5	2	4	3	1		Z	
CITESA		1	4	C	3	B		Z	
CITIFONIX		3	1	2	4	5		Z	
CITOVOX		5	10	0/9	7	T		Z	
COMELIT	VOX ART	P1	3	0/4/C	2	1		Z	
	VOX ART	P1	3	4	2	S		E	
COSESA	AMPER MICRO	R	A	+	B	Z		Z	
ELBEX			MIC	LOW	SPEC	+		Z	
ELVOX		2	6	9	4	+		Z	
	801-822,870	7	2	3/4/5	1	6		Z	
	902/100	7	2	3/4/5A	1	6A		E	
ENTRA	97	1	2	3	6	5		Z	
ENTRYPHONE		3	P	F/B/G	L	A		Z	
ERICSSON	TWINTONE	5	3	2	4	1		Z	
	DEPN 40101	5	3	2	4	1		Z	
	DEPN 60121	3	5	1	7	4		Z	
FAEVI	TF5	8	5	2	4	7		Z,E	
FARFISA		5	1	3	2	6		Z	
		5	1	3	2	9		E	
FECLO		F	A	C	B	E		Z	
FERMAX	REKTO TF-4	P	A	C	B	E		Z	
	20440, 21100	1	2	3	6	4		E	
	TF-1Z, ,TN-Z	1	2	3	6	4		Z	
FRINGE		2	3	1	6	4		Z,E	
GAME		P	2	3	1	Z		Z	
GIRO		2	3	1	6	4		Z	
GOLMAR	T-1000	X	M	A	S	N		Z	
		4/P1	5	3	10	7		Z	
		4/P1	5	3	10	O		E	

MODEL							
FERMAX	LOFT UNIVERSAL	1	2	3	6	4	
GROTHE		1	M	O	T	S	Z
GTN		5	1	7	2	6	Z
GUARDAL	924	5	1	3	2	4	E
	524C	5	1	3/7	2	6	Z
GUINAZ		8	6	5	7	PUL	E
HIRSCHMANN		P	2	3	1	Z	Z
ITALTEL		1	9	6	2	3	Z
LASSER	AMPLIVOX	Z	R	0	T	1	Z
LT TERRANEO	603N	T1	1	3	2	6	Z
	PH610	5	2	4	1	3	E
	PH630	T	1	3	2	6	E
MICROVOX		3	1	2	4	5	Z
MIGLIAVACCA		A	3	5/6	1	7	Z
MM di MARCHESI		1	3	2	4	5	Z
NAGUI		8	6	2	4	7	Z
ORTIGOSA		5	2	4	3	1	Z
OSTELVI		9	2	6	1	7	Z
PAGANI	COMPACT-71	A	1	0	2	3	Z
PHONE		5	1	4	3	2	Z
PORMAT		4	3	2/5	1	V	Z
PUYOLA		Z	M	T	U	LL	Z
RIPOLLES		3	1	8	2	4	Z
RITTO	ELEGANT 40518	11	12	13	15	14	Z
RUMBO		2	3	1	6	4	Z
SAFNAT		4	1	2	3	V	Z
SELT	SL/524	5	1	3/7	2	6	Z
SIEDLE	HT 611-01	1	12	9/C	11	7	Z
SIEMENS		8/7	9	7/6	4	10	Z
SPRINT		11/11	1	3	2	6	Z
STR	NH200	1	M	O	T	S	Z
	NH205	1	M	O	T	S	E
TAGRA		8	2	6	1	4	Z
TECNIPHONE		4	1	3	2	V	Z
TEGUI	GL	3	4	2	5	1	Z
	T-200	3	4	2	5	1	Z,E
		3	4	2	5	1Z	Z
		3	4	2	5	1E	E
TELEVES		4	2	3	1	T	Z
TESLA	DDZ 85	1/Z	2	3	6	4	Z
TRANSIFON		1	5	6	7	4	Z
TRANSVOX		10	3	4	1	12	Z
TUNE		8	2	6	1	4	Z
TYE		8	2	6	7	4	Z
URMET	730, 930, 1030, 1130	8/9	2	11	1	7	Z
	1131	9	2	6	1	CA	E
	DOMUS 1130	5	1	3	2	4	Z
	DOMUS 1131	9	2	10	1	4	Z
VEMEL		5	2	3	4	1	Z
VIDEX		5	1	7	2	6	Z
		5	1	7	2	4	E
YUS PHONE		EL	T	-	R	B/PT	Z
		5	1	7	2	6	Z

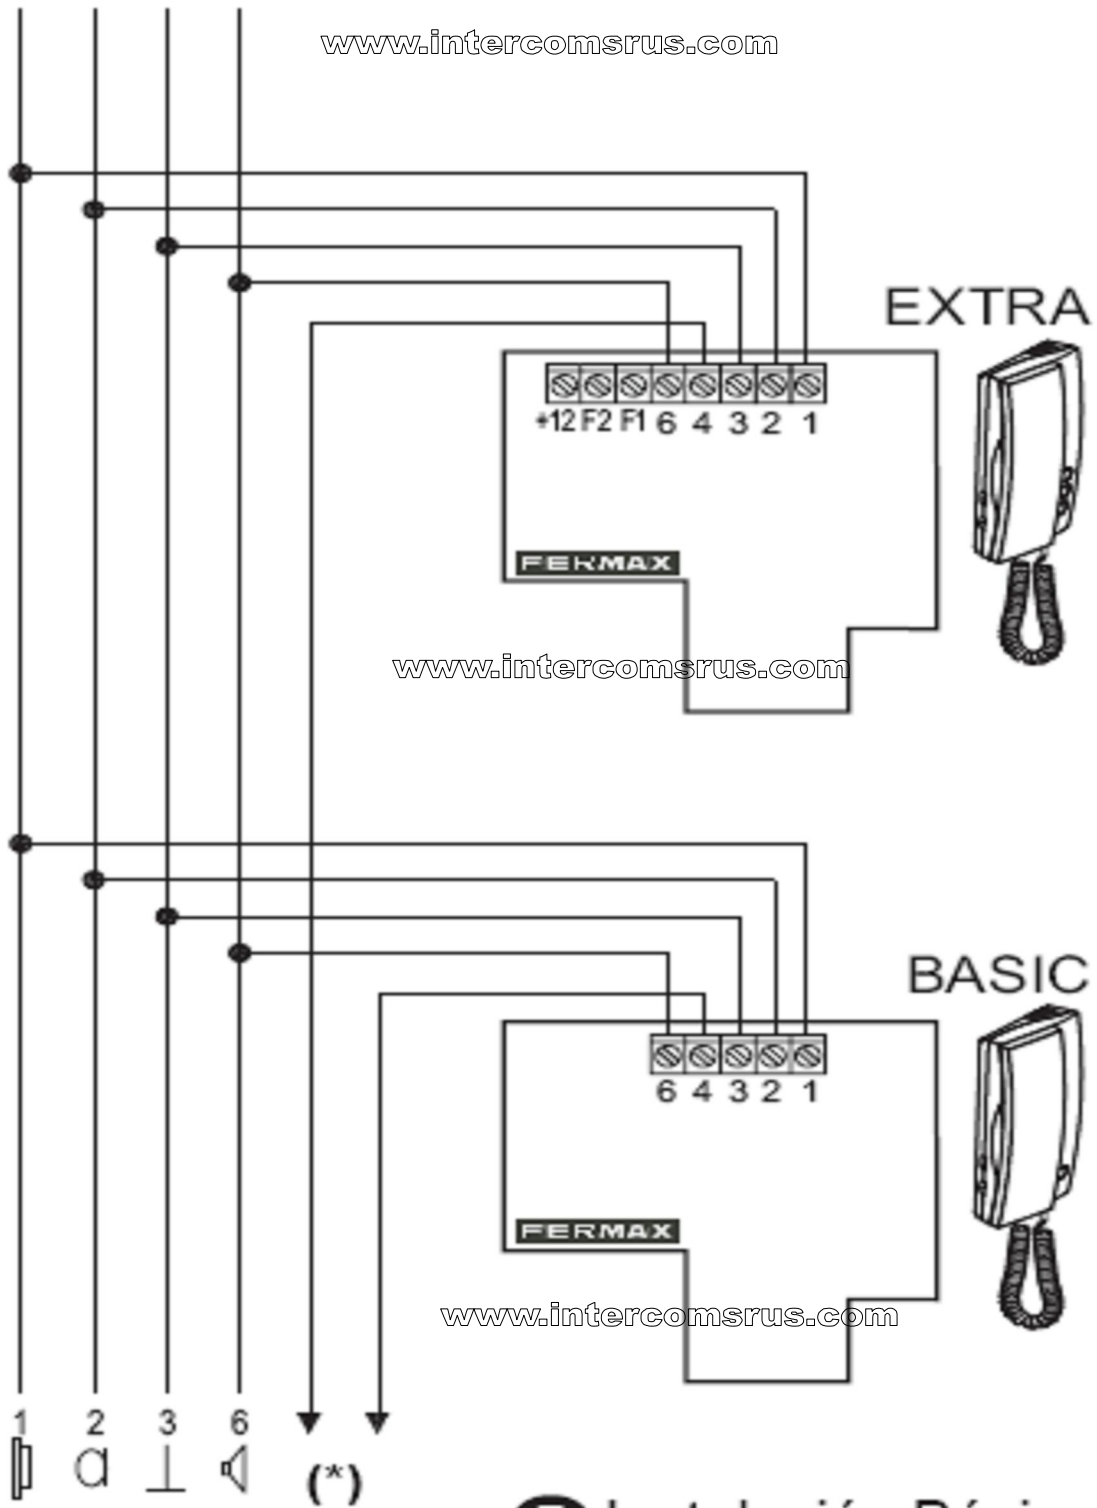

- E** Instalación Básica.
- EN** Basic Installation.
- F** Installation de base.
- D** Basisinstallation.
- P** Instalação Básica.

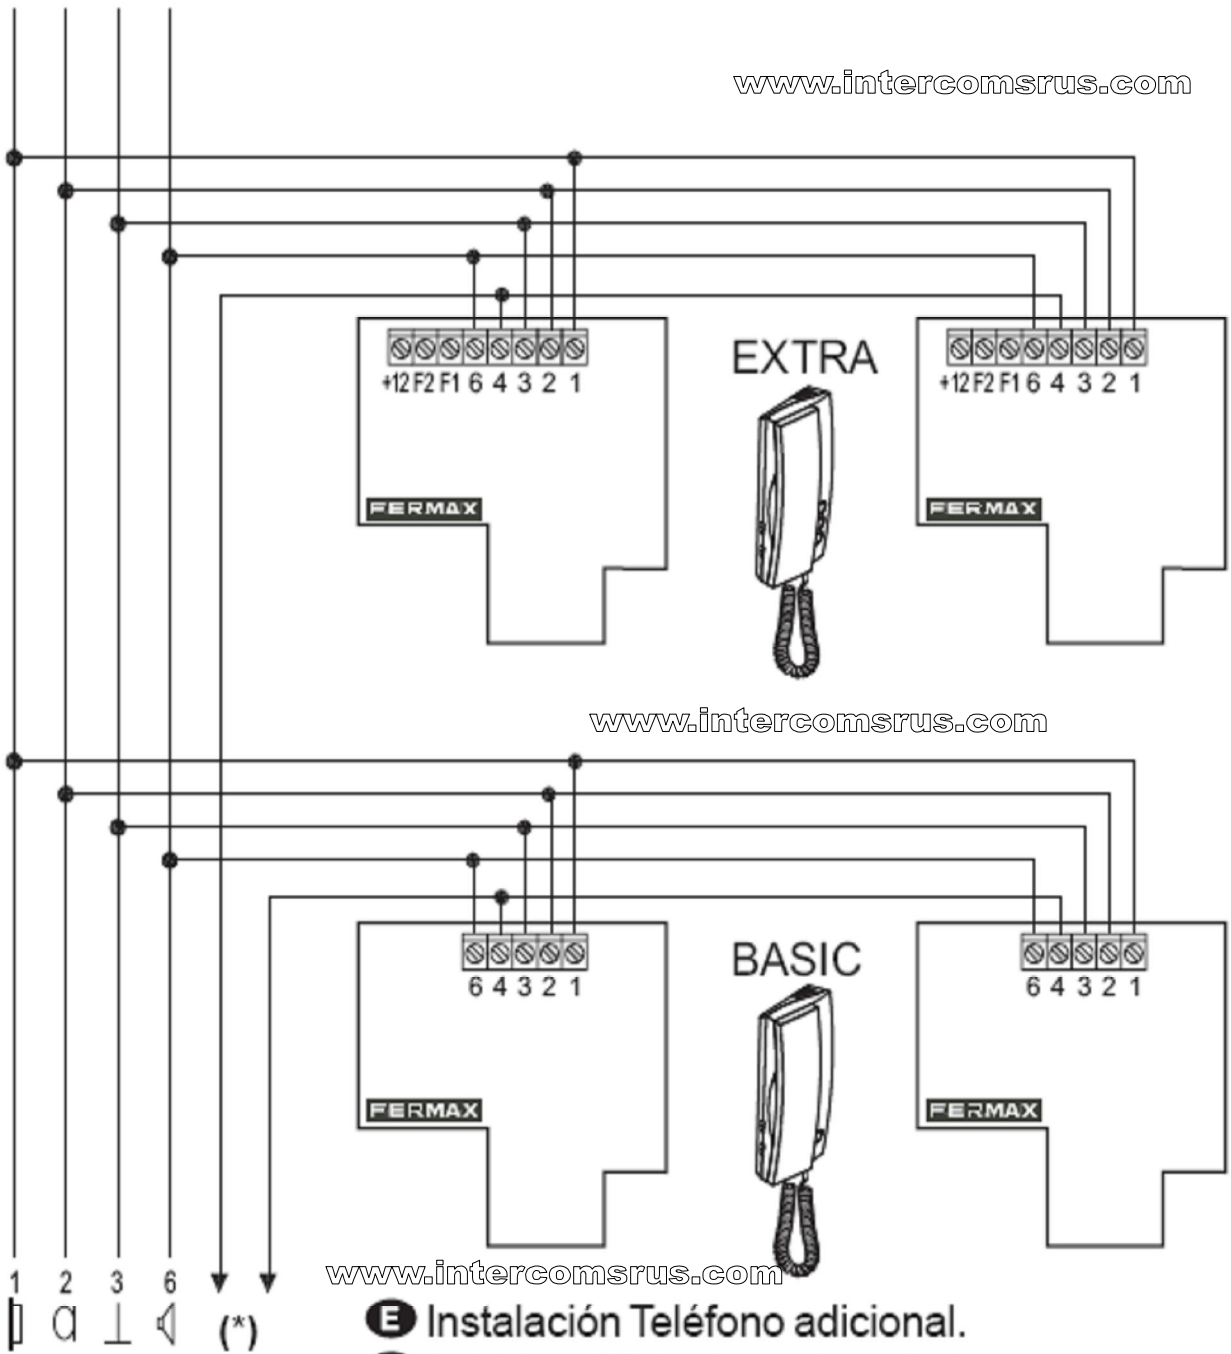

- E** Instalación Teléfono adicional.
- EN** Additional Telephone Installation.
- F** Installation d'un poste supplémentaire.
- D** Installation eines Zusatztelefons.
- P** Instalação de Telefone adicional.

E Instalación Monitor con Teléfonos adicionales.

EN Monitor Installation with Additional Telephones.

F Installation du moniteur avec les postes supplémentaires. **D** Monitorinstallation mit Zusatztelefonen.

P Instalação do Monitor com Telefones adicionais.

