

GDX Audio Handset (GDX5 2B)



Terminals

- 1 Mic (Speech Out) white/blue
- 2 Speaker (Speech In) blue/white
- 3 Ov white/orange
- 4 12 VDC orange/white

TR

EXT SND +

EXT PRIV +

Part No : 23121

IMPORTANT NOTE :


1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).

2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.

3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).



Handset Users Guide

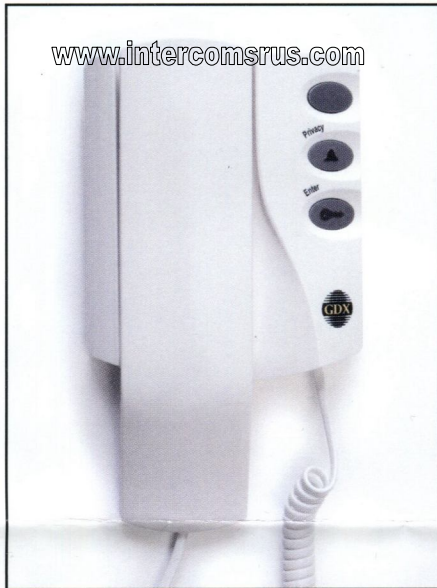

General Description

Your door entry handset allows you to communicate with the door entry call panel and then release the door if required.

Operation

If your handset rings and the Bell symbol on the Privacy button lights up green then a call has been made to your handset from the door entry panel.

If you wish to answer the call lift the handset and talk to the visitor. If you wish to admit the visitor then press the Enter button with the Key symbol on it and the Key symbol will light up red and flash on and off to indicate the door has been released. If you do not wish to admit the visitor then simply replace the handset to end the call.


www.intercomsrus.com

If you do not wish to be disturbed then press the Privacy button and the Bell symbol on the privacy button will light up red to indicate that calls to your handset cannot be made. To revert to normal operation press the Privacy button again and the red light on the Bell symbol will go out again. To prevent you accidentally leaving your handset in privacy mode the system will automatically set your handset back to normal mode after a preset period of time.

If the Key symbol on the Enter button lights up red and stays lit this indicates that the door at the entrance to your block has been left open. Closing the door will reset this.

If for any reason your handset is off hook your handset will not ring when called.

www.intercomsrus.com

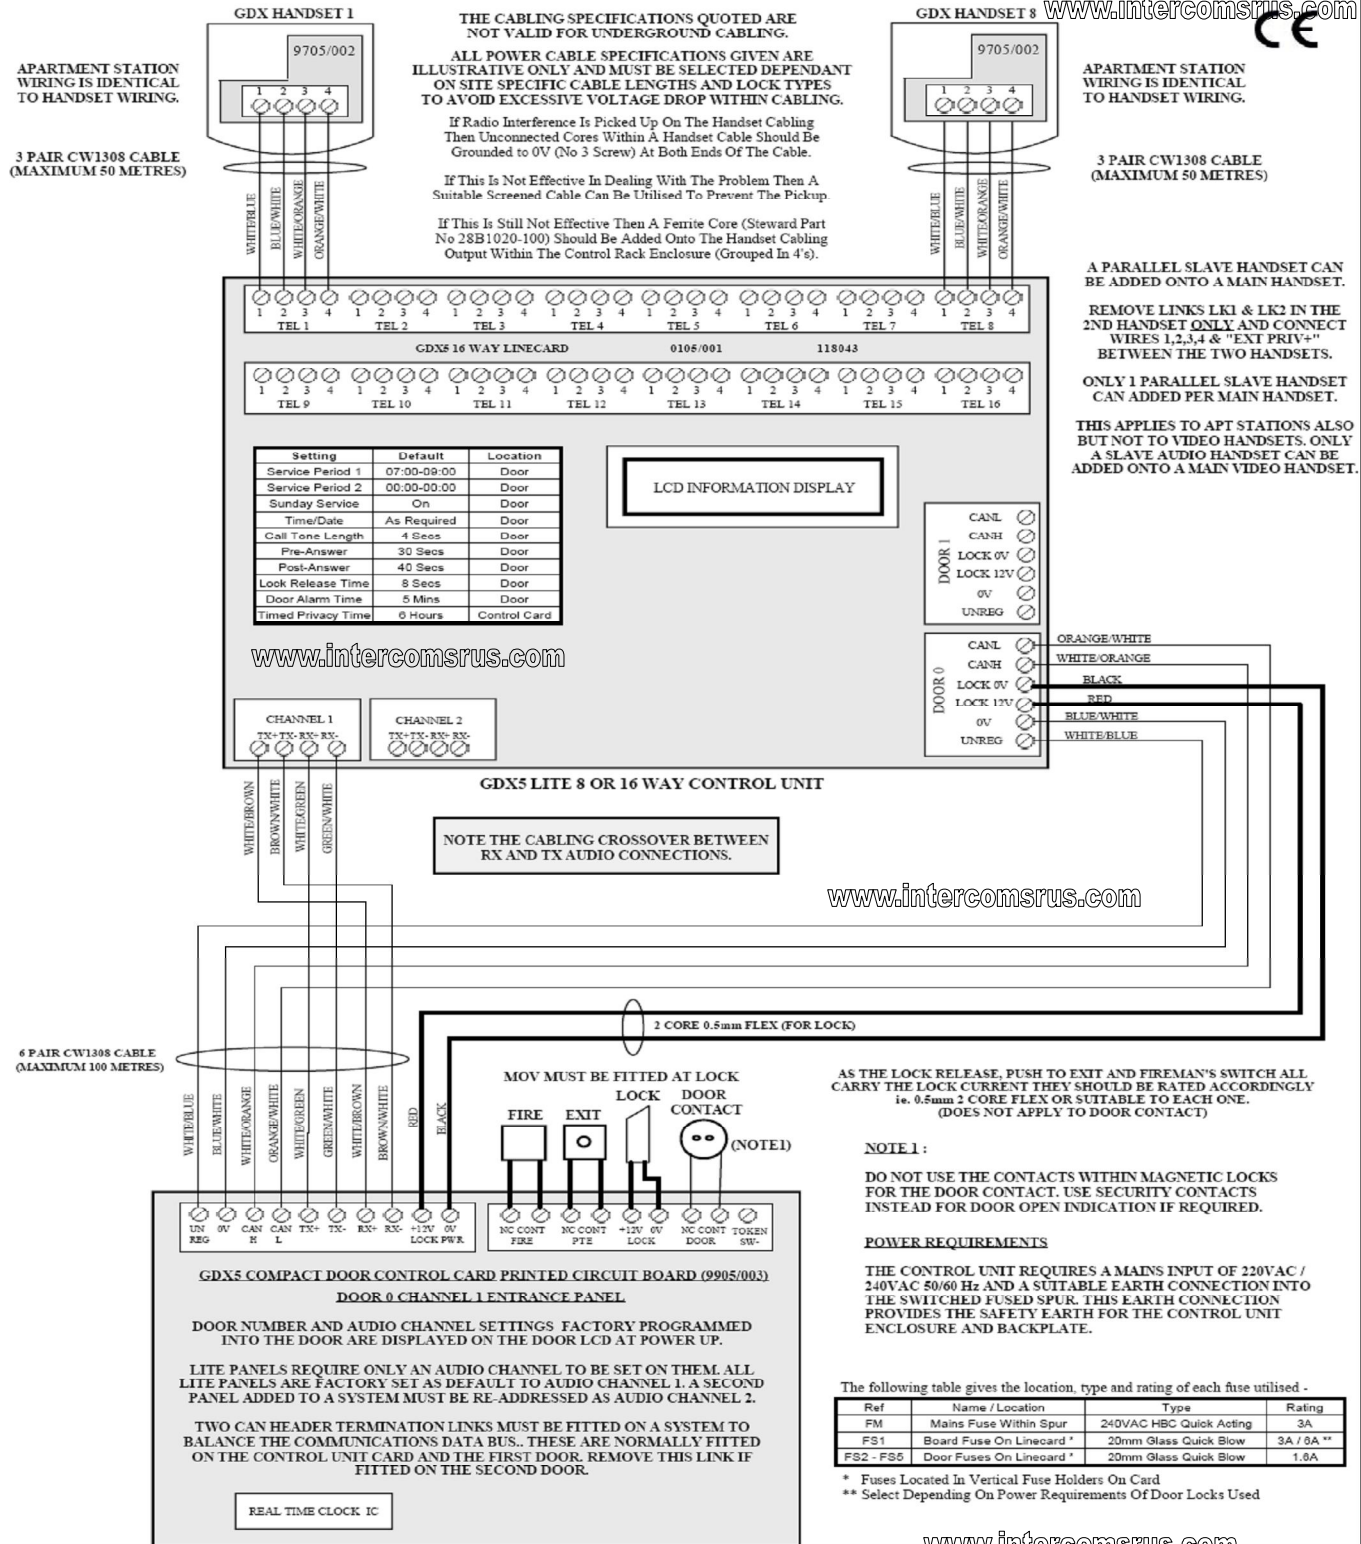

IF SYSTEM IS A 2 DOOR SYSTEM THEN THE 2ND DOOR OR STAND ALONE TOKEN ACCESS READER IS CONNECTED AS SHOWN FOR THE 1ST ONE EXCEPT USING THE DOOR 1 CHANNEL 2 CONNECTIONS. (A STAND ALONE TOKEN ACCESS READER WILL NOT REQUIRE THE AUDIO CHANNEL CONNECTIONS) THE READER MUST BE ADDRESSED AS THE NEXT AVAILABLE DOOR NUMBER ON THE SYSTEM AFTER THE DOORS HAVE BEEN NUMBERED.