STATUS (SML) AT-PID







Terminals

1 Additionl PCB

CA DL, PS, PL

2

6

10


9

IMPORTANT NOTE:

- 1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, <u>do not</u> short them out).
- 2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.
- 3) Some systems may have <u>loop on wiring</u>, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

WIRING DETAILS



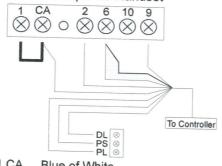

- 1.CA Blue of White
- White of Blue
- 6 White of Orange & Orange of White
- 9 White of Green PS Green of White
- PL Brown of White
- DL
- White of Brown

Operating Instructions

User telephone Instruction Leaflet. Type AT-PID

Once the visitor has called you have the following options and indicators available to you:

To Release the Door

Press the RED Door Release button: this will cause the RED Door Open indicator to flash to confirm the door is being released for your visitor.

Door Open Warning


Once the Main or Landing Entrance door has been opened the RED Door Open indicator will stop flashing and will stay illuminated until the Entrance door is closed.

To Set Telephone Privacy

By pressing the Privacy button you will activate the system timer and illuminate the GREEN Privacy On indicator stopping all incoming calls for a timed period.

You can, at any time if you wish, cancel the timed privacy period by pressing the Privacy Button.

This cancellation will be confirmed by the extinguishing of the GREEN Privacy On indicator.

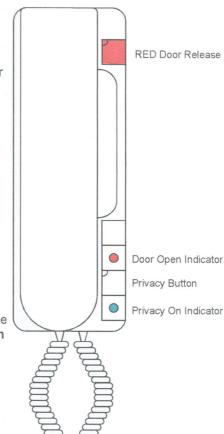

NOTE: There are many different versions of the handsets for STATUS (SML), so a picture of the insides and terminal markings is the best way to get a positive identification.

SML-1130/1 SML-1130/N SML-1130/NI	Standard Handset (Mechanical Buzzer) + 1 Button Urmet Modified Handset to N Urmet Modified Handset to NI
SML-1130/NID SML-1130/NIDP	Urmet Modified Handset to NID (Mechanical Buzzer) Urmet Modified Handset to NIDP
SML-1130/T SML-1130/TSL SML-1131/1	Urmet Modified Handset to T (Mechanical Buzzer) Urmet Modified Handset to TSL (Mechanical Buzzer) Standard Handset (Electronic Tone) + 1 Key
SML-1131/N SML-1131/N	Urmet Modified Handset to N Urmet Modified Handset to NI (Electronic Tone)
SML-1131/NID SML-1131/NIDP	Urmet Modified Handset to NID (Electronic Tone) Urmet Modified Handset to NIDP (Electronic Tone)
SML-1131/CNID SML-1131/T SML-1131/DC	Urmet Modified Handset to CNID Urmet Modified Handset to T (Electronic Tone) Urmet Modified Handset to DC (Electronic Tone)
SML-1131/DCP AT-PID	Urmet Modified Handset to DCP (Electronic Tone) Telephone c/w Privacy Button, Indicator & Door Open
AT-PID/C	Telephone c/w Privacy Button, Indicator, Door Open & Concier

© 2010 www.intercomsrus.com