

BTICINO 344242 (2 WIRE)



Terminals

3 Bus

4 Bus

Note : ID Pins are required

IMPORTANT NOTE :


1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).

2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.


3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

Wiring For Up To 100

APARTMENT 66

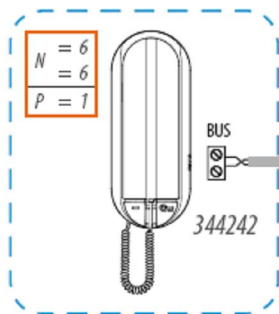


APARTMENT 99

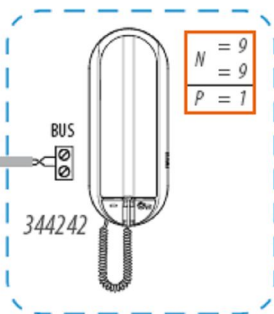


www.intercomsrus.com

Up to 100 audio handsets maximum

APARTMENT 1

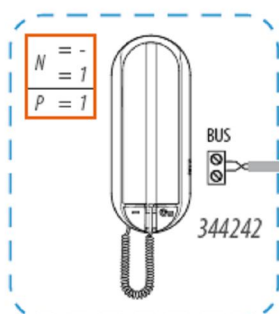


APARTMENT 2

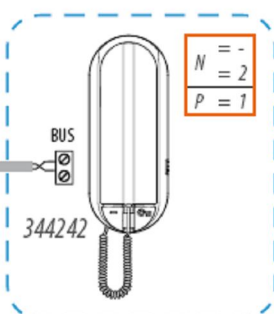

www.intercomsrus.com

Main switchboard = 0

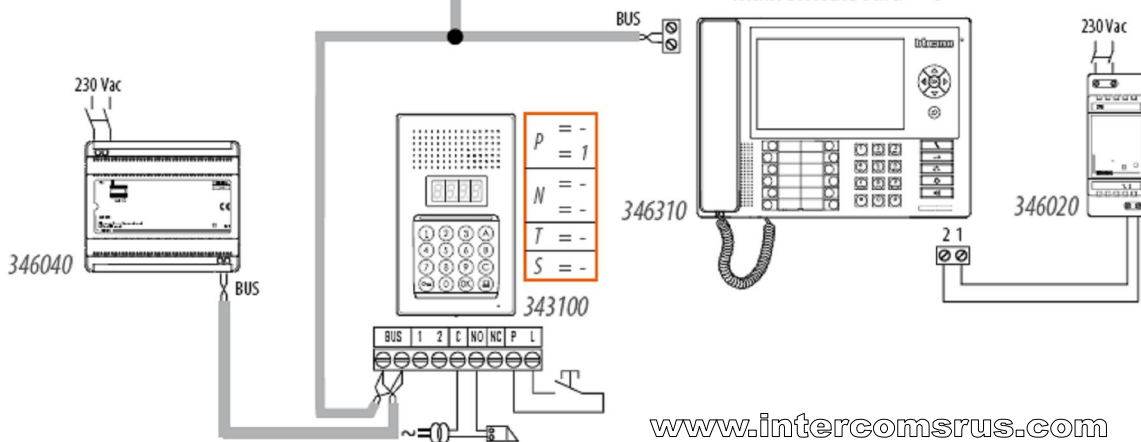


www.intercomsrus.com

Configuration

The handset **MUST** be configured by physically connecting the configurators to the appropriate sockets as follows:

N - handset number

The N configurator assigns to each handset an identification number (1 - 99) within the system. The handsets must be configured in progressive order. In case of handsets with parallel connection (max 3), these must be configured using the same N configurator.

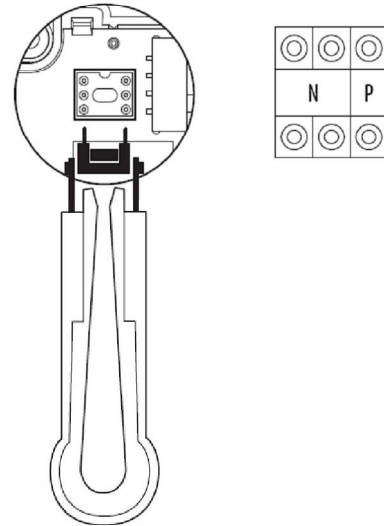

1. Modern and simple design



2. Three door bell volume levels



3. Two pushbuttons:
- Door lock function
- Free for applications (e.g. external light)



intercoms

WWW.INTERCOMSRUS.COM