# LT 600 (Beige)








# Terminals 1 Speech Out (Mic) 7 2 Speech In (Speaker) 8 3 Common 9 4 10 5 11 6 Call 12 T1 Lock

### **IMPORTANT NOTE:**

- 1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, <u>do not</u> short them out).
- 2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.
- 3) Some systems may have <u>loop on wiring</u>, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

© 2010 www.intercomsrus.com

# WIRING DIAGRAM LT 600 & LT 603n

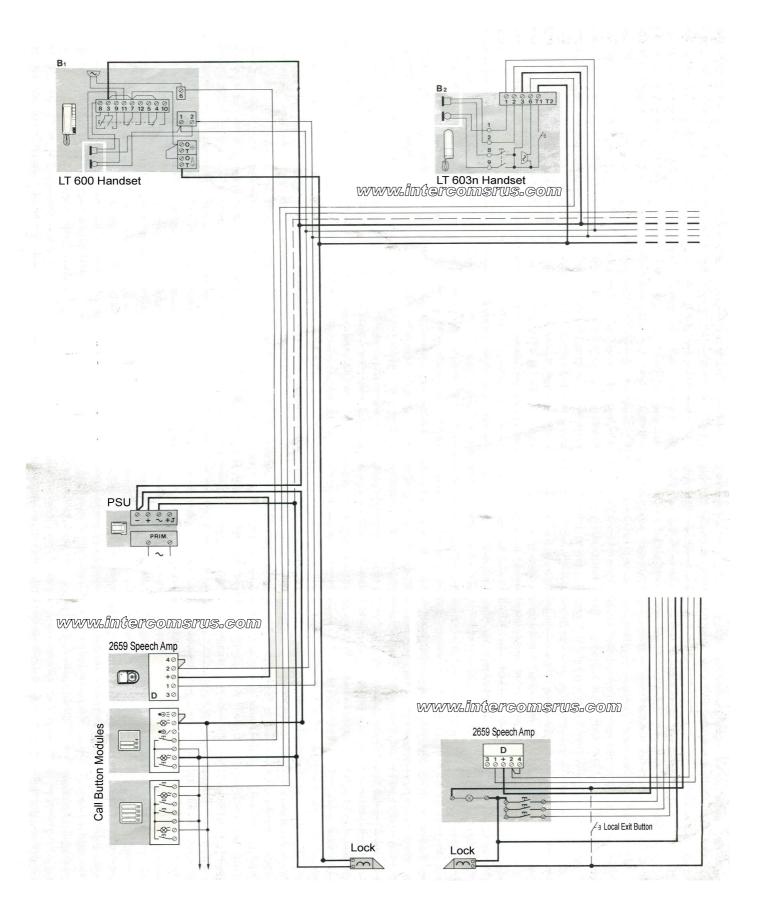

# WIRING DIAGRAM LT 600 & LT 603n with 2 Entrance Panels

