

LT 603.2 (2 Wire) White



Terminals

1 Common
2 Output for aux sounder 40.50N
4 Audio & Door Lock Control

Also on simplified system
PH620WS & 601CE Handsets

IMPORTANT NOTE :


1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).

2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.

3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

WIRING DIAGRAM

1 Way 2 Wire System with 1000 Series Panels

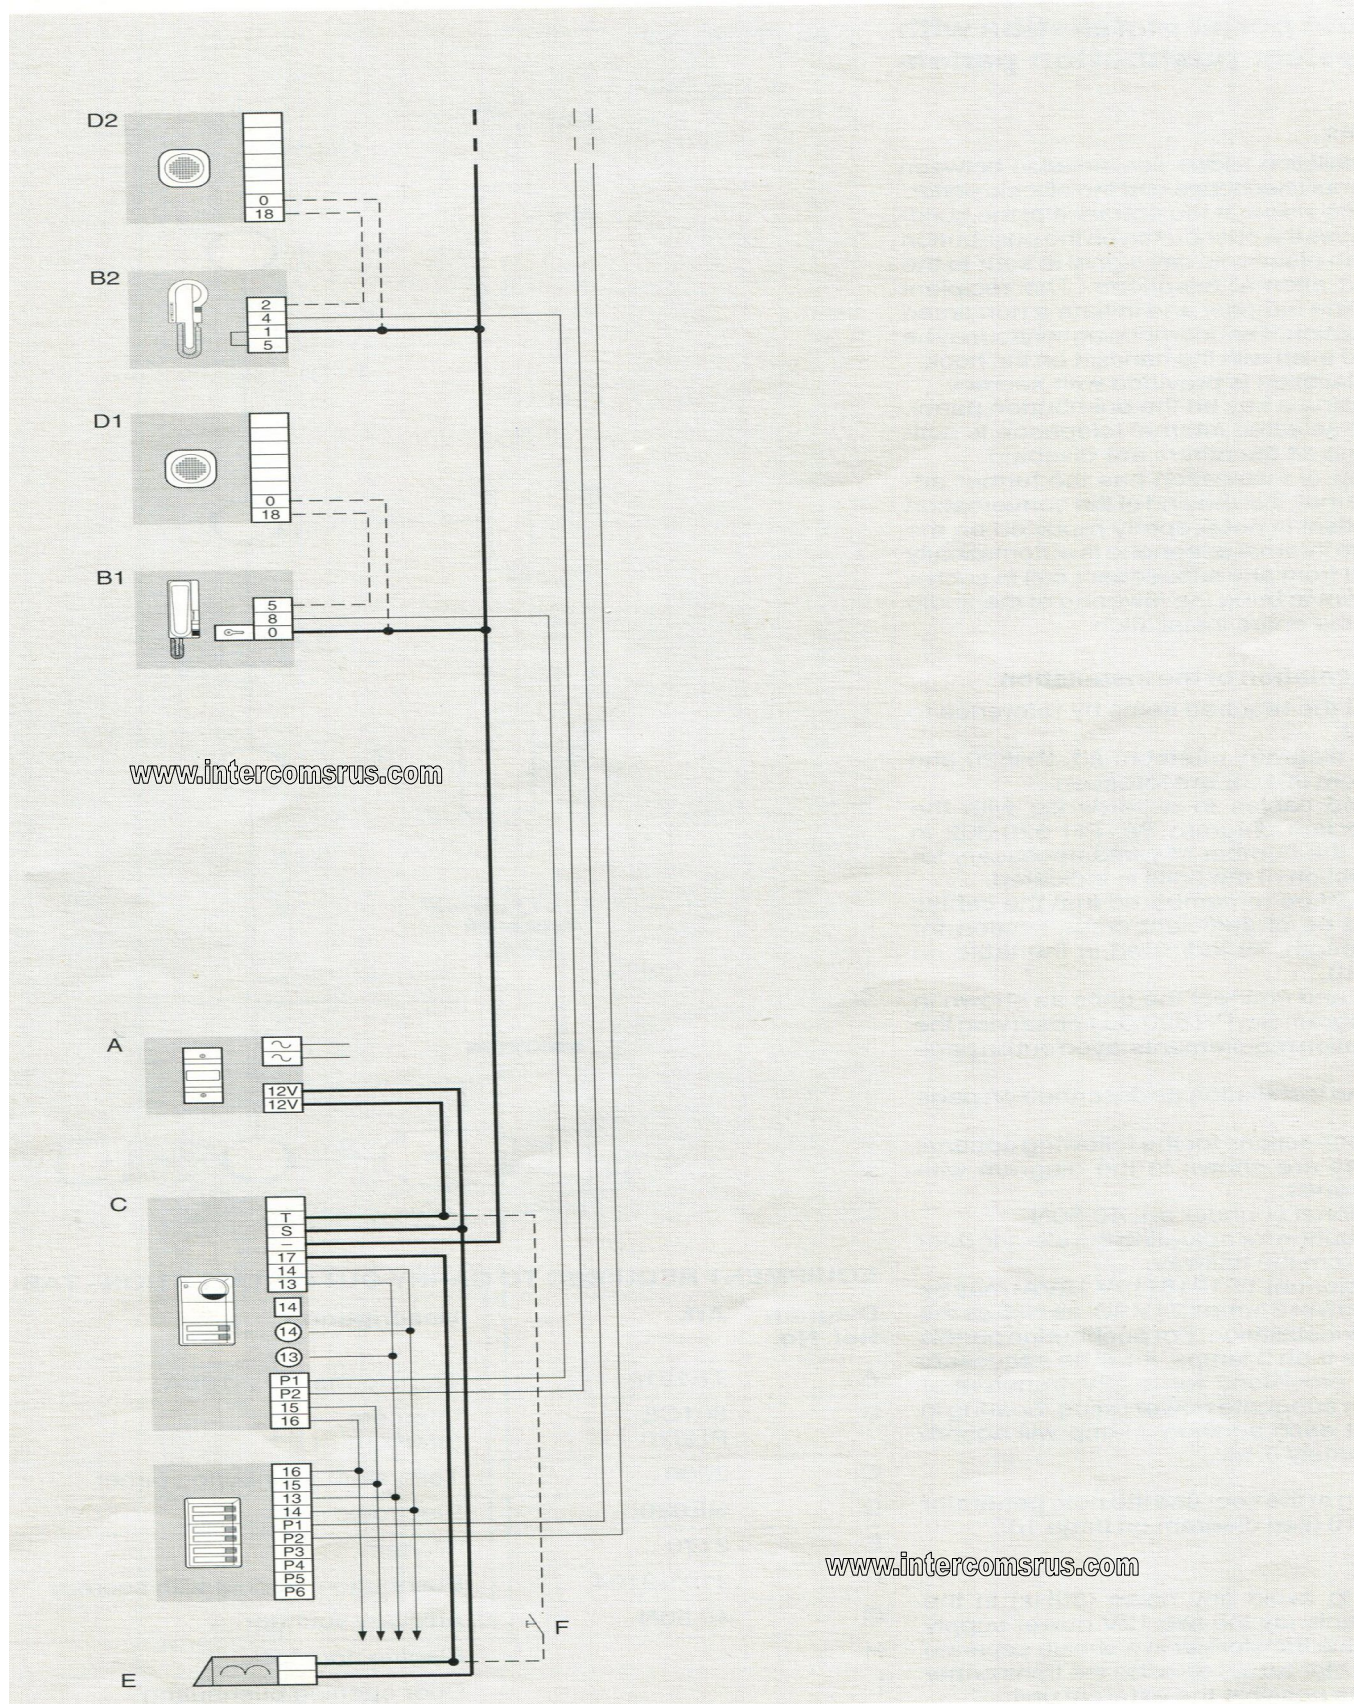


WIRING DIAGRAM

2 Entrance (2 Wire) with 1000 Series Panels

ic.SM102.004

www.intercomsrus.com

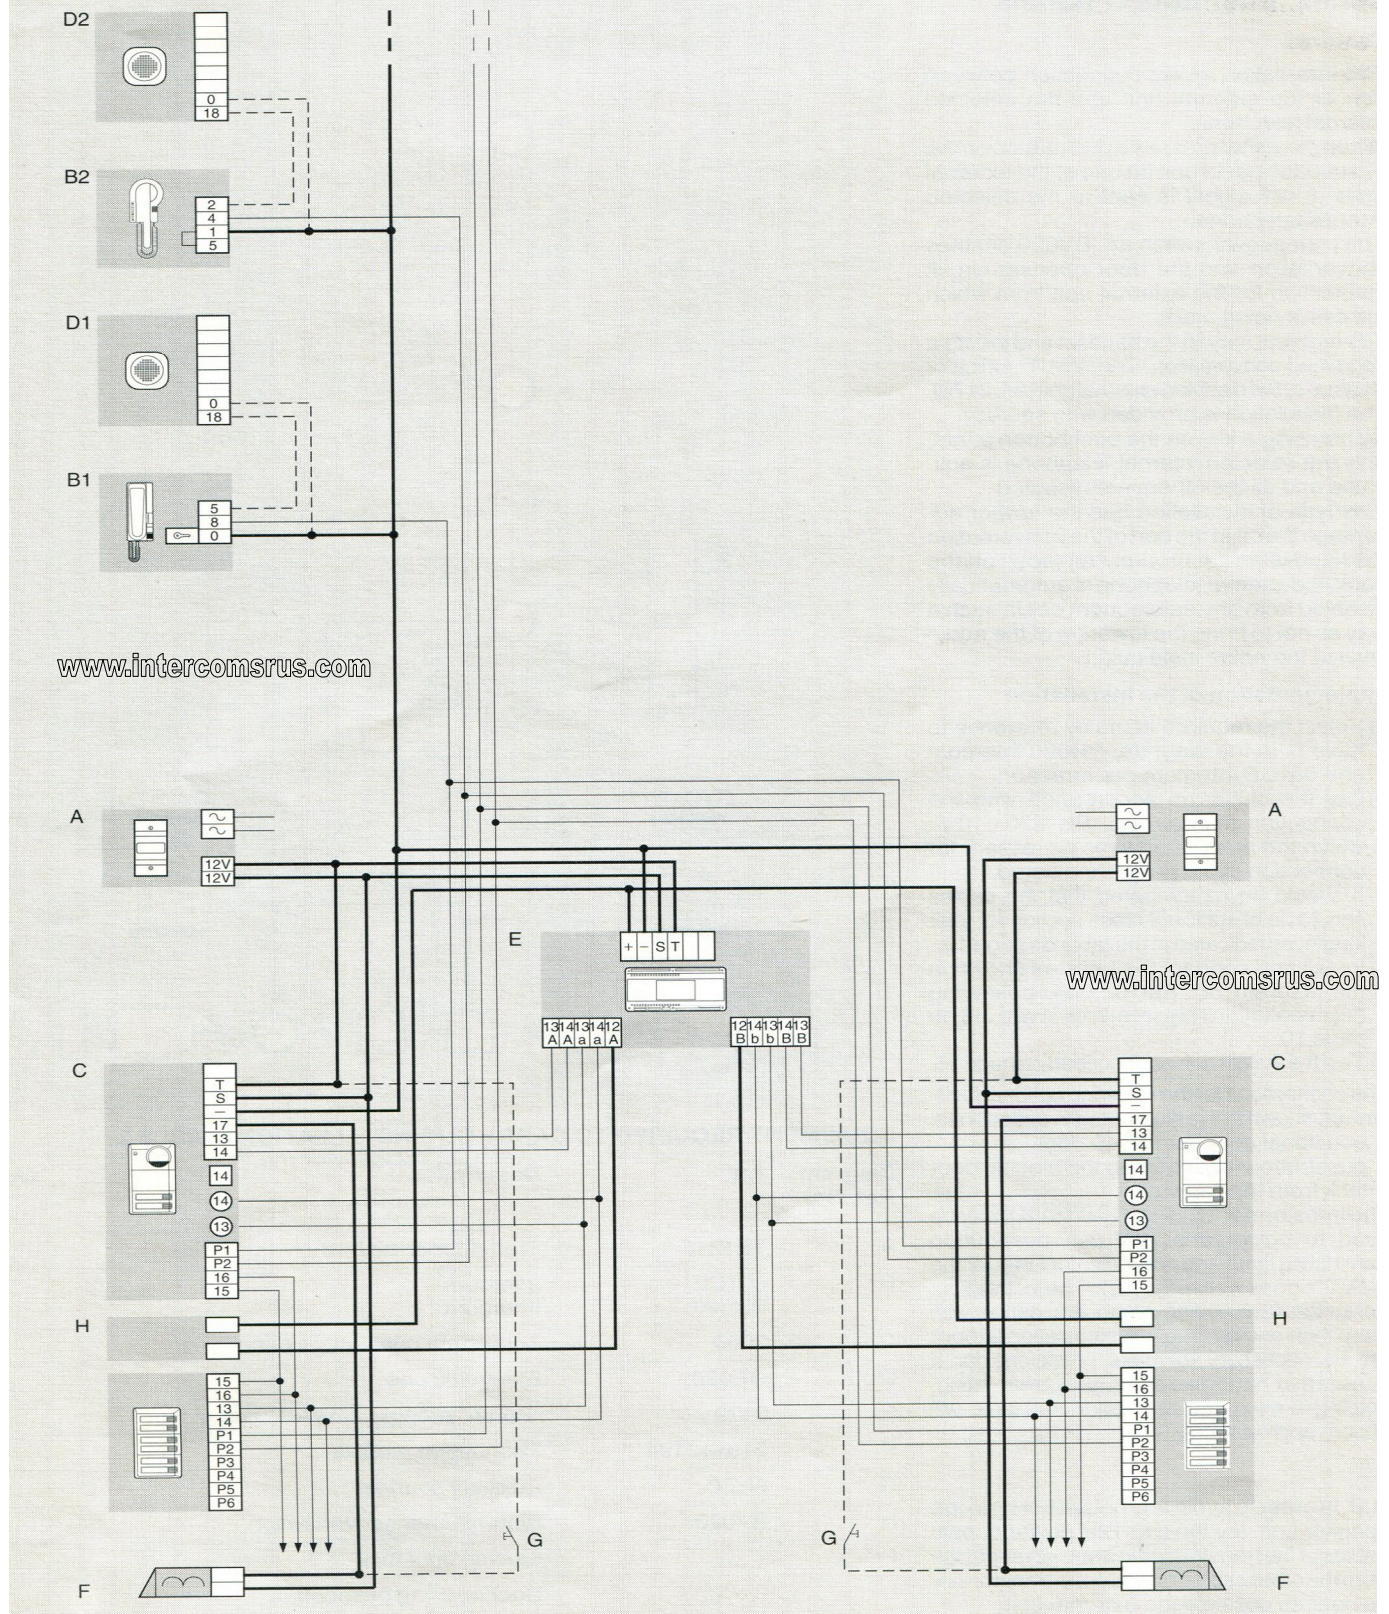


WIRING DIAGRAM

1 Way (2 Wire) with 2000 Tersystem Panels

Sc.PH620.001

www.intercomsrus.com

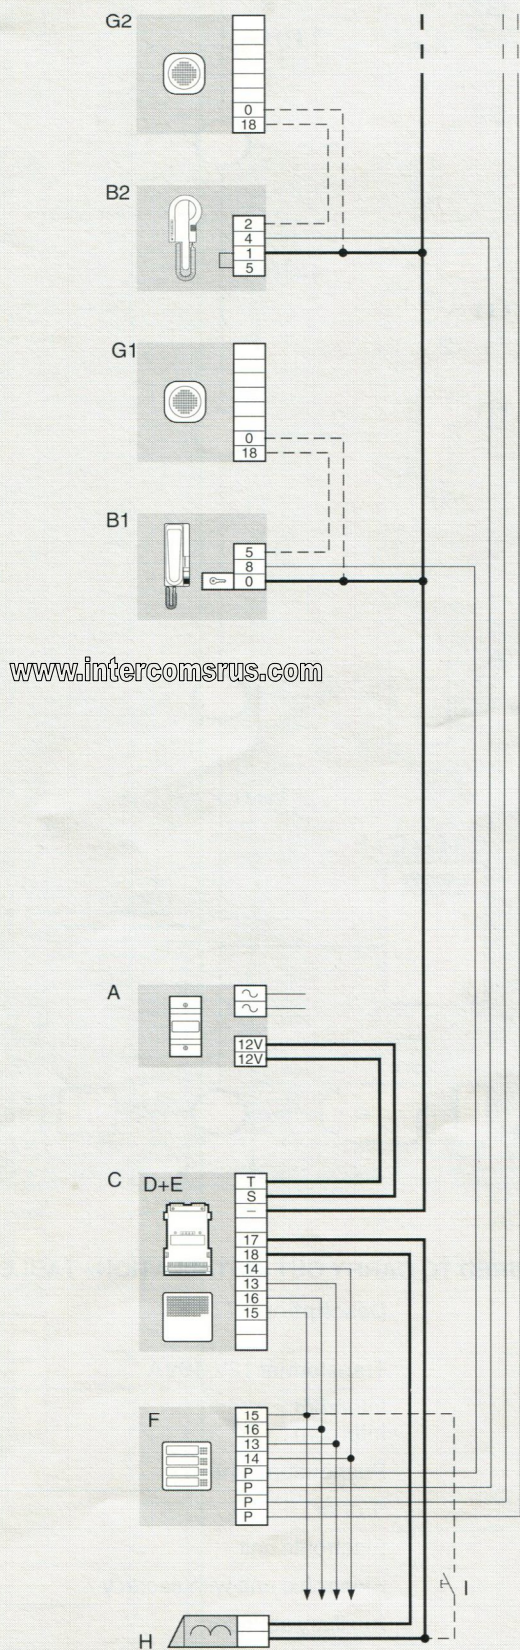

www.intercomsrus.com

www.intercomsrus.com

WIRING DIAGRAM

2 Entrance (2 Wire) with 2000 Tersystem Panels

Sc.PH620.009

