LT 603n White







Terminals


- 1 Speech Out (Mic)
- 2 Speech In (Speaker)
- 3 Common
- 6 Call
- T1 Lock

IMPORTANT NOTE:

- 1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, <u>do not</u> short them out).
- 2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.
- 3) Some systems may have <u>loop on wiring</u>, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

© 2010 www.intercomsrus.com

WIRING DIAGRAM LT 600 & LT 603n

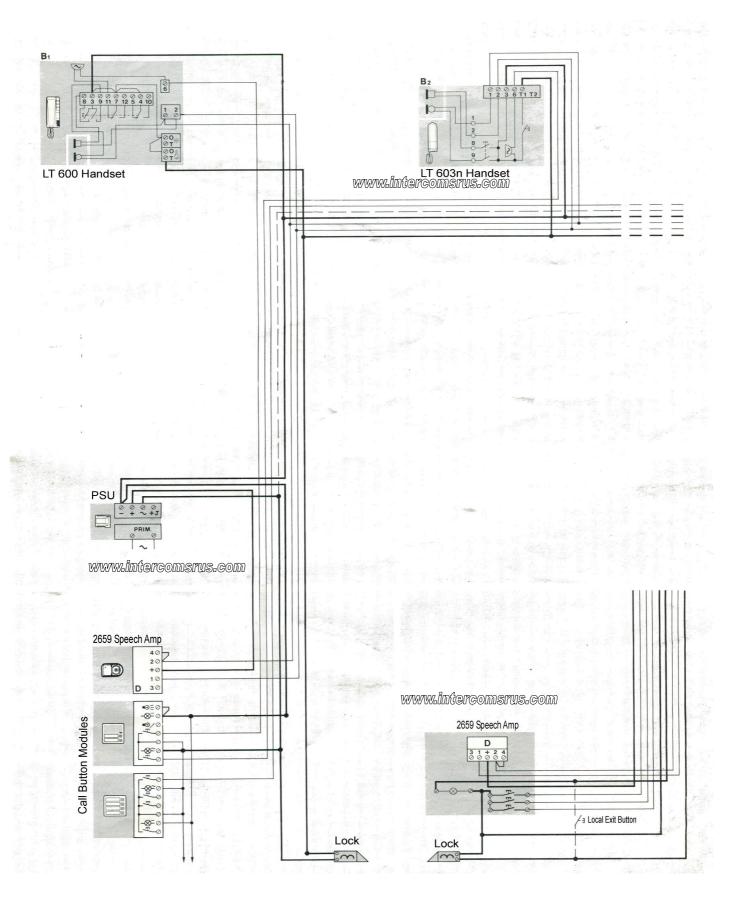

WIRING DIAGRAM LT 600 & LT 603n with 2 Entrance Panels

