
RITTO Elegant

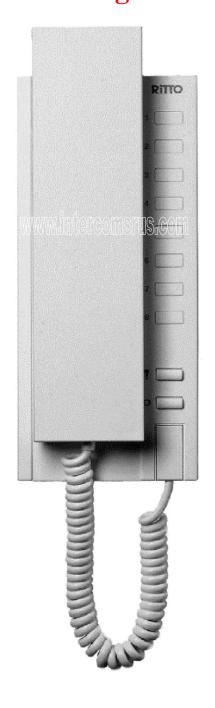

Terminals


- 51/52 Volt Free Switch
 - 11 Lock Release
 - 12 Microphone (Speech Out)
 - Common 13
 - 14 Electronic Call
 - 15 AC Call

IMPORTANT NOTE:

- 1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, <u>do not</u> short them out).
- 2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.
- 3) Some systems may have <u>loop on wiring</u>, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

© 2010 www.intercomsrus.com

WIRING DIAGRAM 1 Way Kit Wiring.

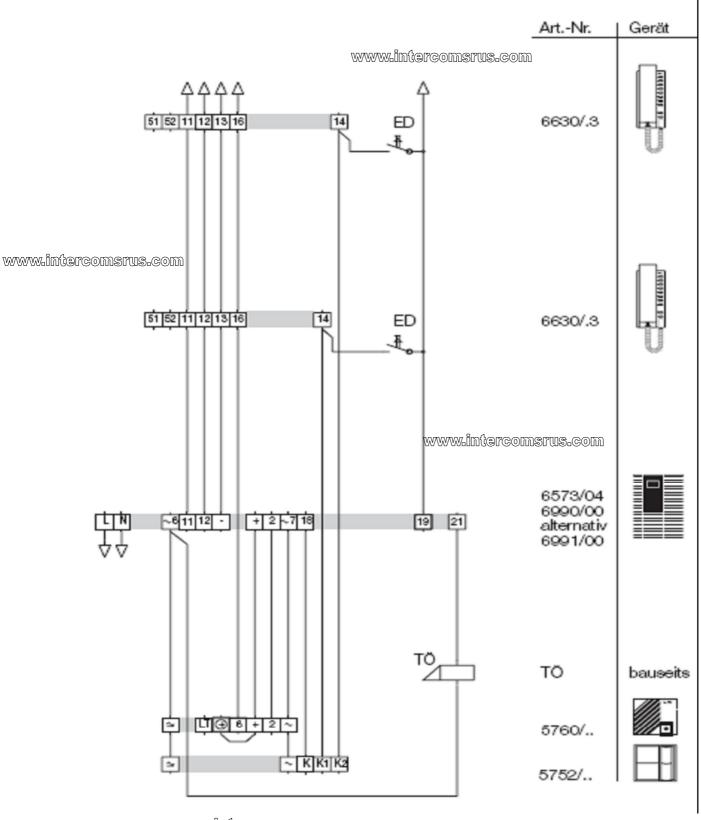

www.intercomsrus.com

WIRING DIAGRAM

2 Entrance Wiring Diagram

