

Tegui T-71E (Series 7)



Terminals

1E	Call (Electronic)
2	Common
3	Lock
4	Speech Out (Mic)
5	Speech In (Speaker)
P	Aux Button
P	Aux Button

IMPORTANT NOTE :


- 1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).
- 2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.
- 3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

WIRING DIAGRAM

1 Way Kit with 3750 00 Central Audio Unit

Esquema de instalación 1 puerta de acceso

www.intercomsrus.com

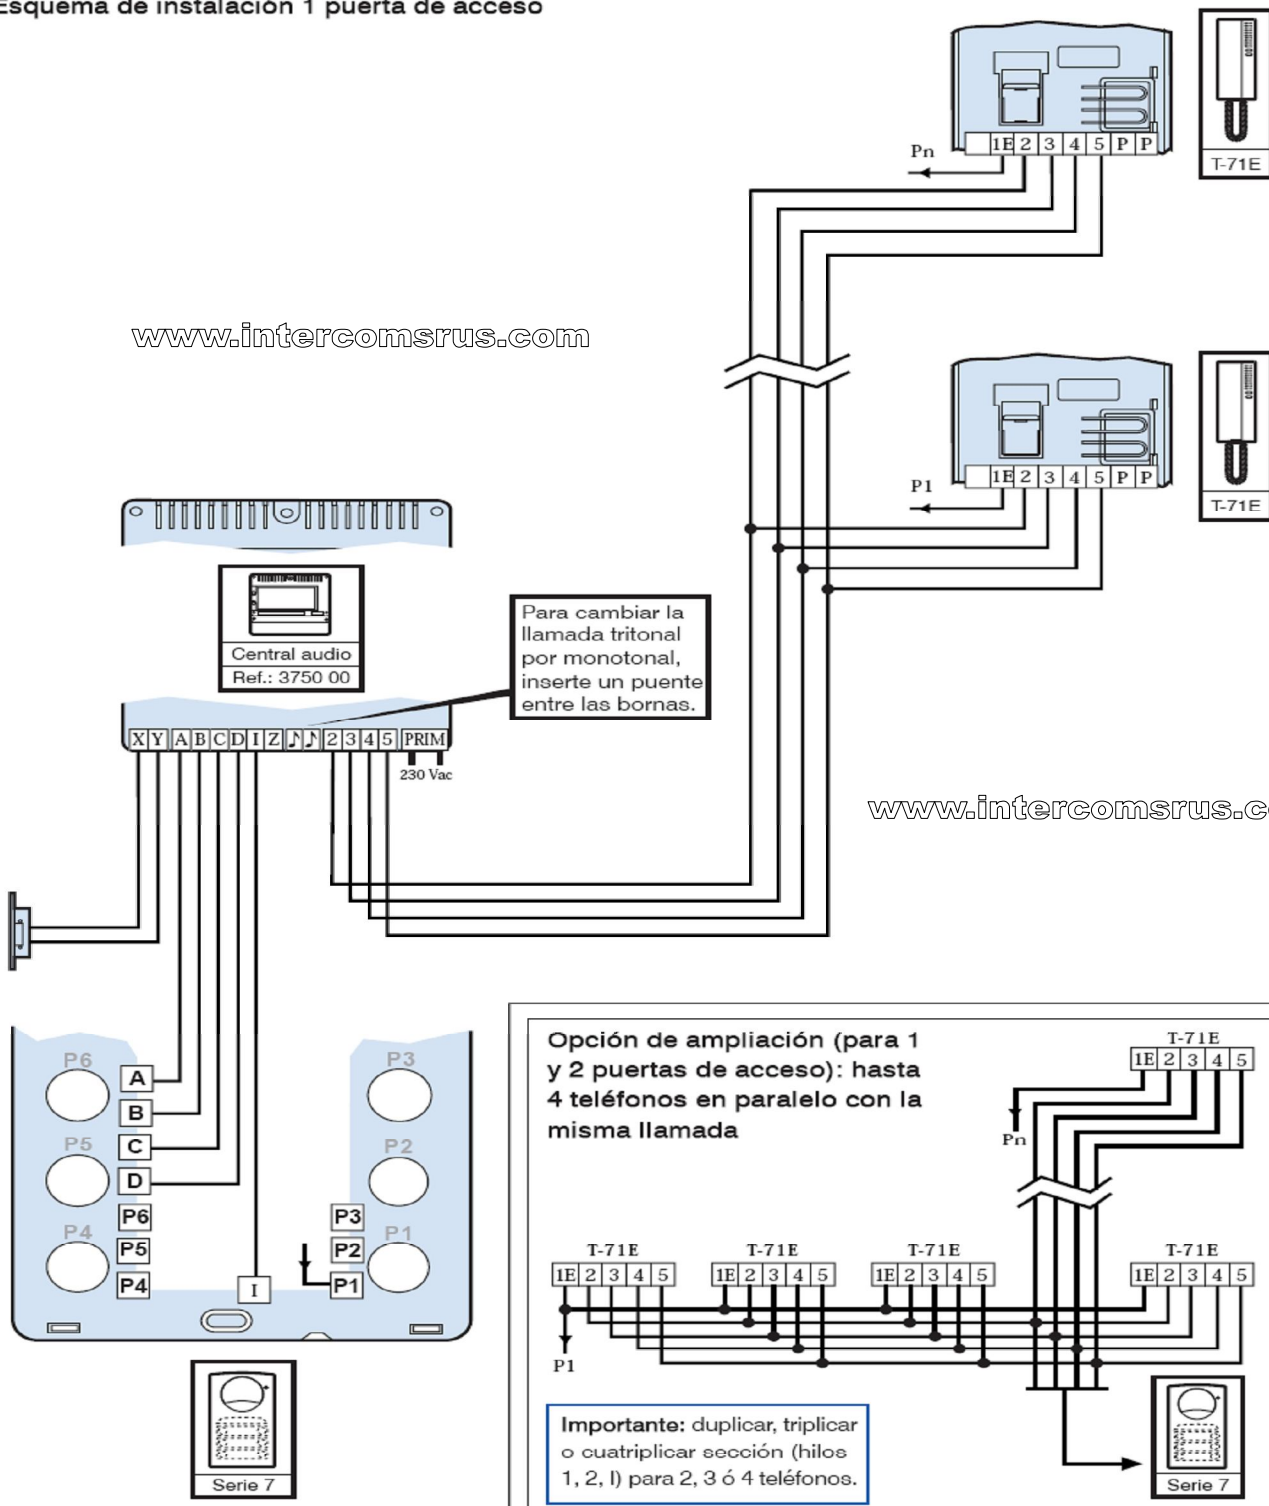

www.intercomsrus.com





WIRING DIAGRAM

2 Entrance Kit with switcher and 3750 00 Central Audio Unit

Esquema de instalación 2 puertas de acceso

www.intercomsrus.com

Importante
 Configure el E-53 como equipo cambiador automático (consulte la información técnica que acompaña al E-53).

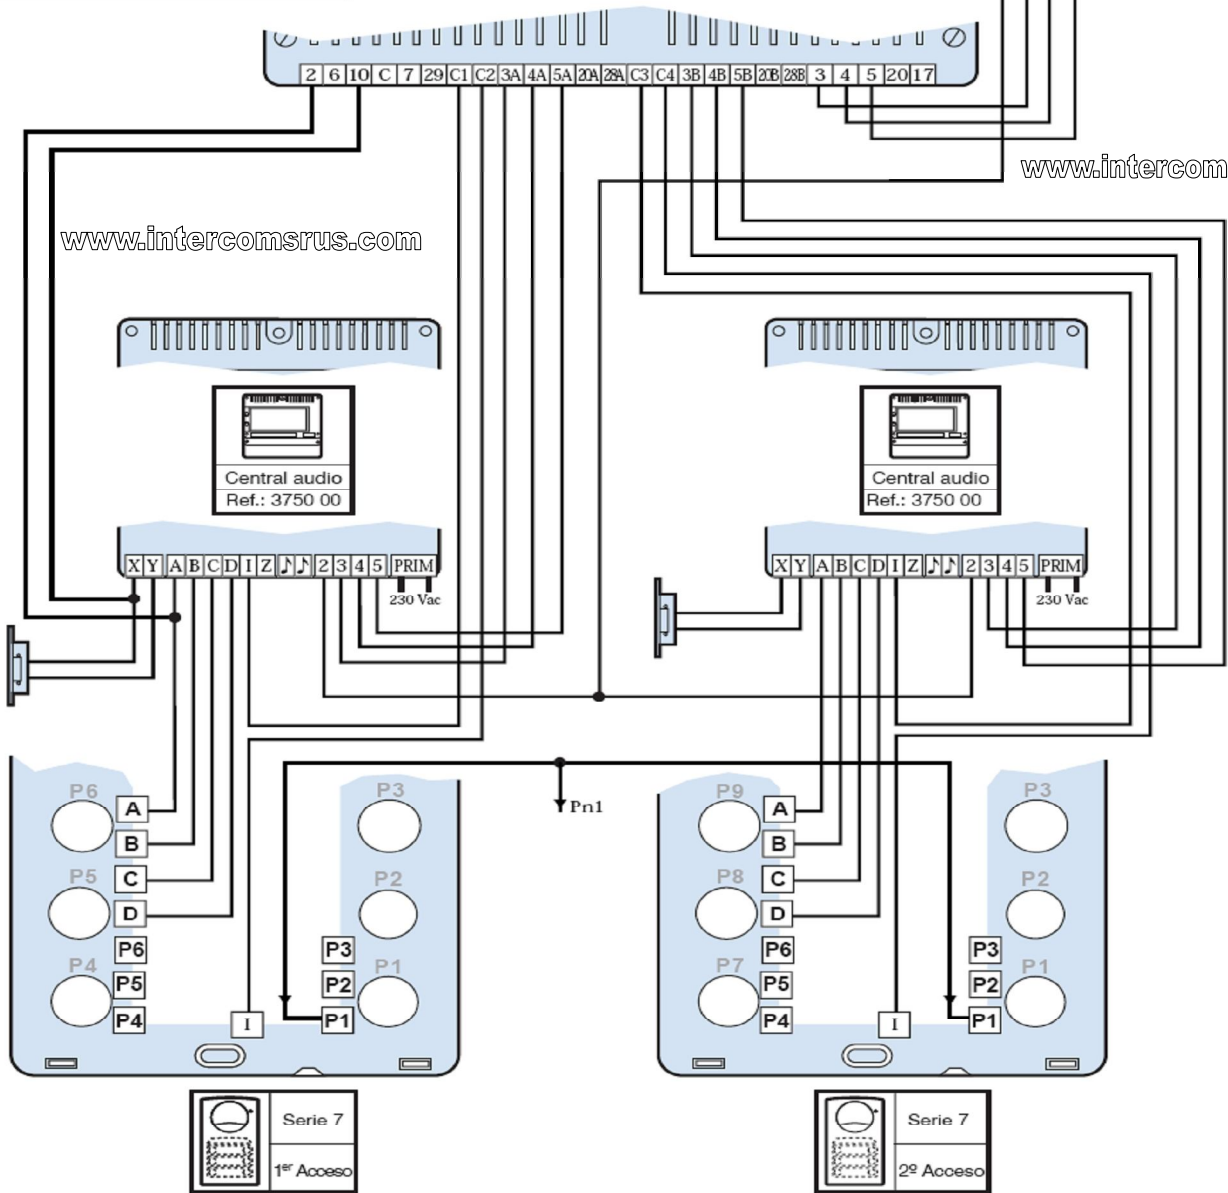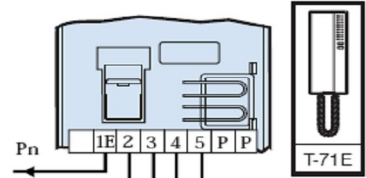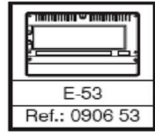

www.intercomsrus.com

WIRING DIAGRAM

Audio Kit with 090021 front entrance panel

Para llamada electrónica

Seleccione en el grupo fónico el tipo de llamada:



Para llamada zumbador

EGF-21: conecte Borna 19 en lugar de 20

T-71Z: conecte Borna 1Z en lugar de 1E

www.intercomsrus.com

