

Urmet 1138/3 NEW VERSION (Digi-Voice Systems)



Terminals

0V	Ground
CA	Call Line
FA	Speech Out
FB	Speech In

IMPORTANT NOTE :

- 1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, do not short them out).
- 2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.
- 3) Some systems may have loop on wiring, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).

INSTRUCTIONS

urmet
DOMUS

DIGIVOICE


Mod.
1138

DS 1138-006


LBT 7898

**CITOFONO DIGIVOICE
DIGIVOICE HOUSE PHONE
POSTE D'APPARTEMENT DIGIVOICE
INTERFONO DIGIVOICE
DIGIVOICE SPRECHANLAGE**



Sch./Ref. 1138/3

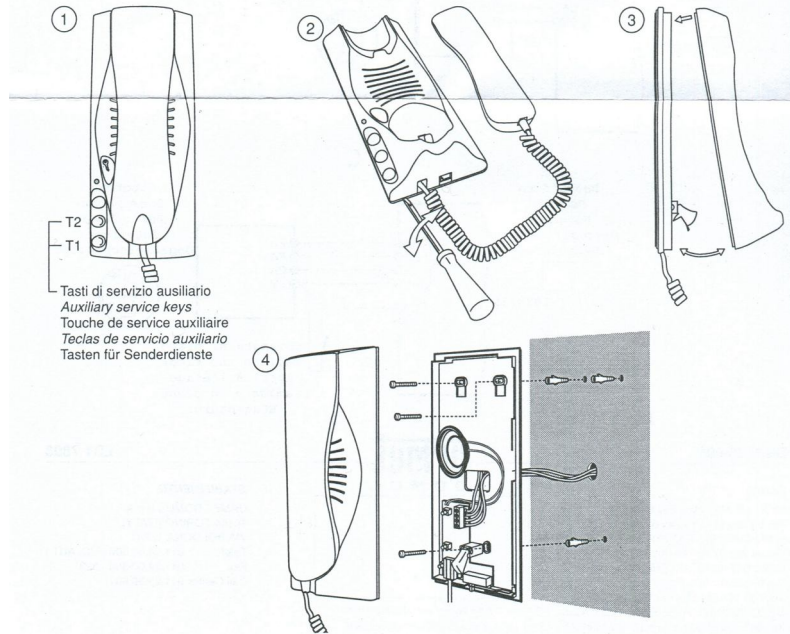

T2
T1
Tasti di servizio ausiliario
Auxiliary service keys
Touche de service auxiliaire
Teclas de servicio auxiliar
Tasten für Senderdienste

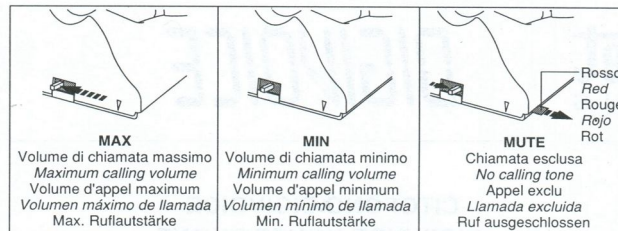


**Esempio di collegamento con decodifiche multiple
Examples of connection with multiple decoders
Exemples de branchement avec les décodeurs multiples
Ejemplos de conexión con las descodificaciones múltiples
Anschlussbeispiele mit Mehrfachdecodierern**

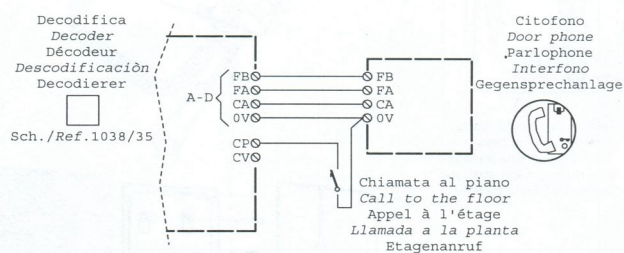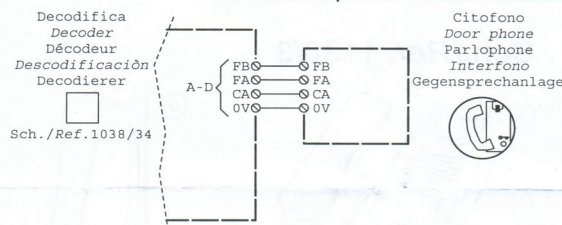


WIRING DIAGRAM


urmet
DOMUS

CONNECTION OF 1 DOOR PHONE COLUMN WITH SINGLE DECODER
TO 1 DOOR UNIT WITH DIGITISED DOOR UNIT



SC124-0105B

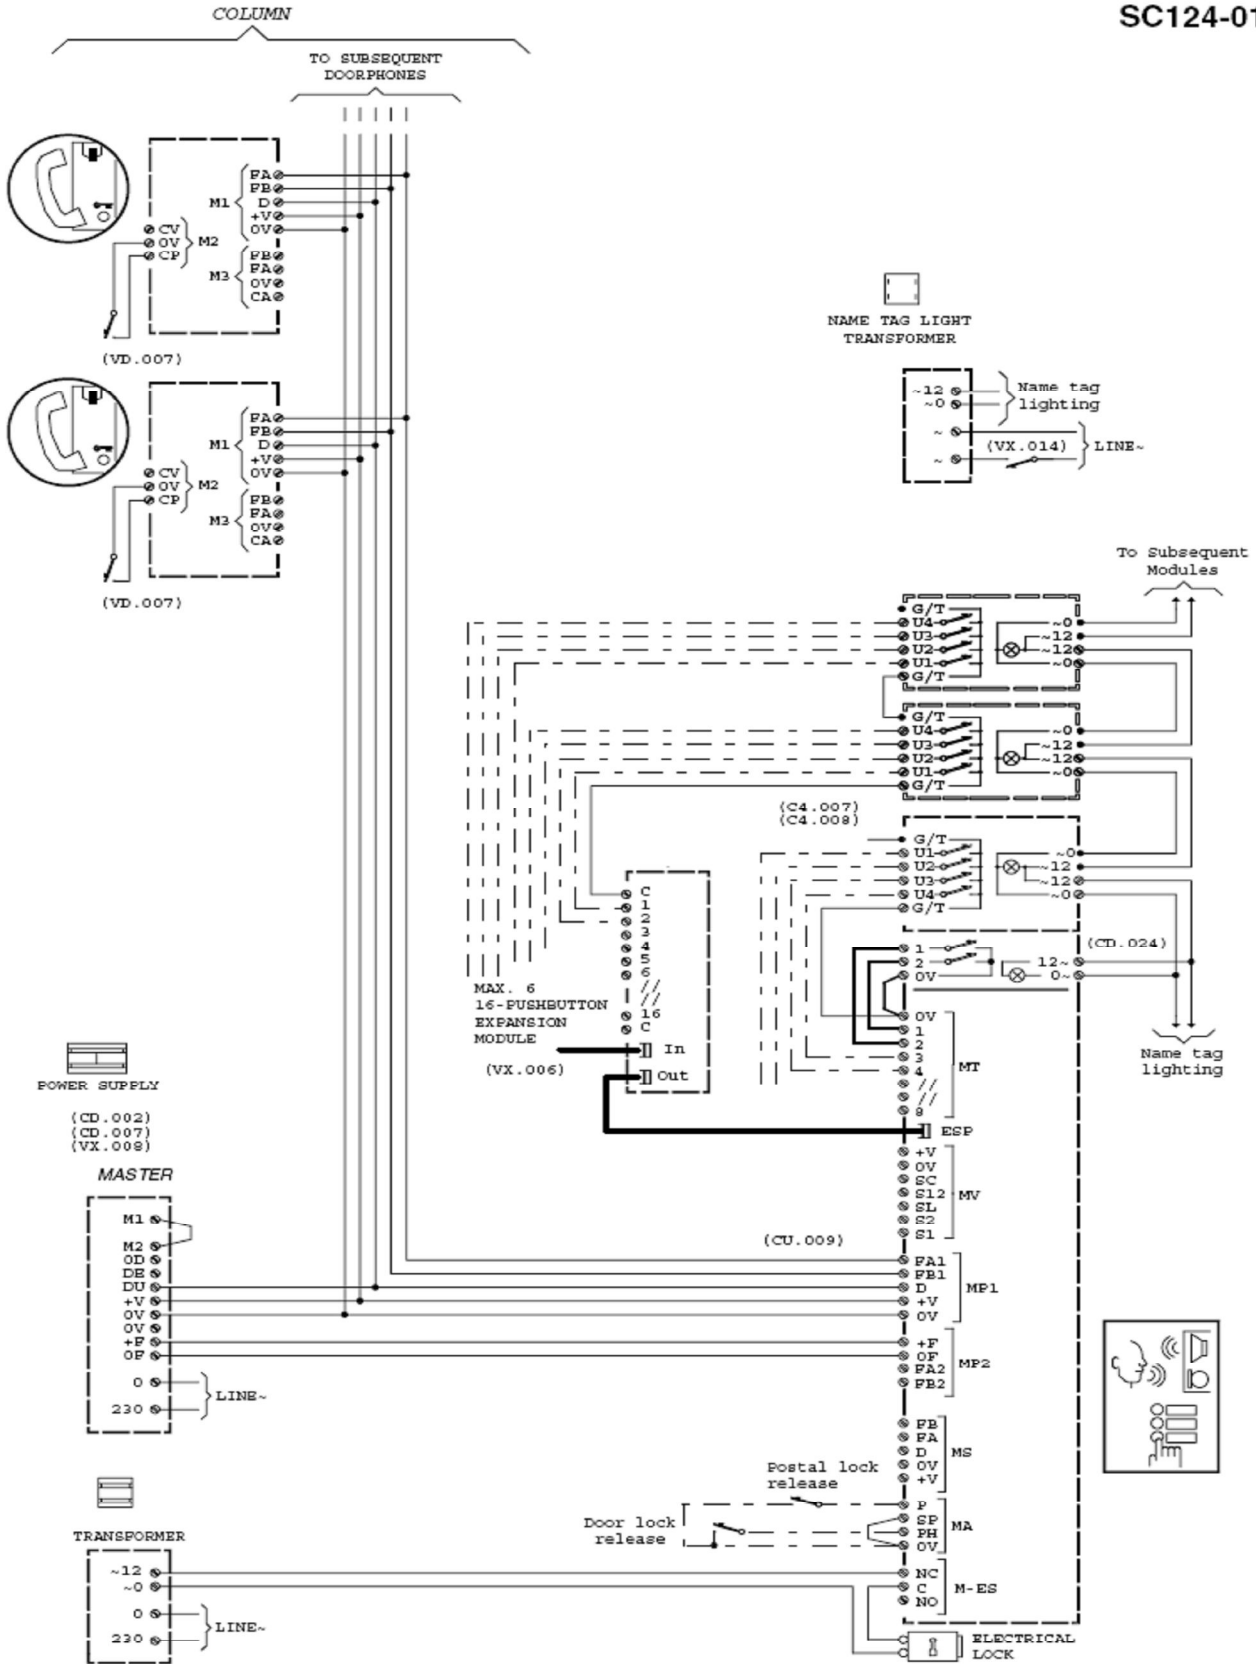



SC124-0033D

