Comelit 2602u Style Universal







Terminals

A Lock

B Speech Out (Mic)

C Common

D Call (Electronic or Buzz)

E Speech In (Speaker)

C2,P2 Aux Button N/O

Sw Call Type Selector

Trimmers Mic & speaker adjust

Jumper Configuration Jumper

IMPORTANT NOTE:

- 1) Before replacing the handset make note of the wires to each terminal on the existing unit (an easy way is to cut each core off leaving a piece of the insulation in place with colour visible) twist unused cores together (so you know they are not used, <u>do not</u> short them out).
- 2) Some older systems will have cable with one coloured core and a solid white core in this case mark each core with a marker or tape.
- 3) Some systems may have <u>loop on wiring</u>, you will have 2 cables into your handset (make sure any joins remain, as these may be serving other flats on the system).


Compatibility Chart

COMELIT ART. 2602U - ART. 2603U WWW.Intercomsrus.com	А	В	С	D	Ε	E M	J1
ACET	5	10	2	9	7	М	٠٧
ALCAD TEL-001 - TEL002	1	3	2	5	4	Ε	٠٧
AMPER	D	A	С	Ε	В	М	-V
ATEA	2	4	3	5	1	М	٠٧
AUTA	10	3	4	12	7	М	-V
AUTA TF92	10	3	4	12	7	Ε	٠٧
AUTELCO	P5	a	1	2	b	М	-V
BELL SYSTEM TELEPHONE	Z	R	0	Τ	Т	М	٠٧
BITRON	9	2	6	C7	1	Е	-V
BOGEN	Т	1	3	6	2	М	-V
ВРТ	9	9	5	7	8	Е	٠٧
ВРТ	2	1	4	3	5	М	٠٧
CENTRAMATIC	4	2	1	5	3	М	٠٧
CITESA	1	4	С	В	3	М	٠٧
CITOVOX	5	10	9	T	7	М	-۷
COFREL (LT TERRANEO)	T1	1	3	6	2	М	٠٧
COFREL (LT TERRANEO)	6	4	1	5	3	Е	-V
COFREL 600 (LT TERRANEO)	Т	1	3	6	2	М	-V
COFREL 603 (LT TERRANEO)	Т	6	3	6	2	М	-V
COMELIT VOX ART. 2100	P1	3	4	1	2	М	٠٧
COMELIT VOX ART. 2101	P1	3	4	S	2	Е	٠٧
COMELIT VOX ART. 2102	P1	3	4	1	2	М	٠٧
COMELIT VOX ART. 2103	P1	3	4	1	2	М	٠٧
COMELIT VOX ART. 2104	P1	3	4	S	2	Е	٠٧
COMELIT CIAO ART. 2300	P1	3	4	S	2	Е	٠٧
COMELIT CIAO ART. 2301	P1	3	4	S	2	Е	٠٧
COMELIT CIAO ART. 2302	P1	3	4	S	2	Е	٠٧
COMELIT CIAO ART. 2304	P1	3	4	1	2	М	٠٧
COMELIT OKAY ART. 2402W	P1	3	4	S	2	Е	-V
COMELIT OKAY ART. 2404W	P1	3	4	S	2	Е	٠٧
COMELIT OKAY ART. 2405W	P1	3	4	S	2	Е	٠٧
ELBEX		MIC	LOW	+	SPEC	М	٠٧
ELVOX	2	6	9	+	4	М	-V
ELVOX	7	2	4	6	1	М	-V
ELVOX 6200	7	2	3	6E	1	Е	-V
ENTRA 97	1	2	3	5	6	М	-V
ENTRYPHONE	3	1000	F.B.G	_	L	М	٠٧-
ERICSSON DEPN 40101	5	3	2	1	4	М	٠٧
ERICSSON DEPN 60121	3	5	1	4	7	М	-V
FARFISA	5	1	3	6	2	М	-V
FERMAX 2044 - 20440 - 2110	1	2	3	4	6	E	+L
E 1110/00/2017 - 20170 - 2110		-	U	7	0	_	TL

COMELIT ART. 2602U - ART. 2603U WWW.lintercomsrus.com	Α	В	С	D	Ε	E M	J1
FERMAX Gondola	4	1	3	V/5	2	М	-V
FERMAX Rekto TF-4	Р	Α	С	Ε	В	М	-7
FRINGE	2	3	1	4,*	6	ΜE	-۷
GAME	Р	2	3	Z	1	М	٠٧
GIRO	2	3	1	4	6	М	٠٧
GOLMAR	Χ	М	Α	N	S	ΜΈ	-V
GOLMAR	C2	5	3	7	10	Ε	٠٧
GOLMAR	11	5	3	12	4	М	٠٧
GOLMAR T-600	Т	1	3	6	2	М	٠٧
GOLAMR T810B	P1	5	3	7	10	М	-V
GOLAMR T-2800	4	5	3	7	10	М	-V
LT TERRANEO (COFREL)	T1	1	3	6	2	М	٠٧
LT TERRANEO (COFREL)	6	4	1	5	3	Ε	٠٧
LT TERRANEO (COFREL) 600	Т	1	3	6	2	М	-V
LT TERRANEO (COFREL) 603	Т	6	3	6	2	М	٠٧
MM DI MARCHESI	1	3	2	5	4	М	٠٧
OSTELVI	9	2	6	7	1	М	٠٧
PORMAT	4	3	2	٧	1	М	٠٧
RIPOLLES	3	1	8	4	2	М	-V
RITTO ELEGANT 40518	11	12	13	15	14	Ε	٠٧
SAFNAT	4	1	2	٧	3	М	-V
SELTI	5	1	3	6	2	М	-V
SIEDLE HT611-01	Ι	12	9/C	7	11	М	-V
SPRINT	"ju	1	3	6	2	М	-٧
STR NH200	1	М	0	T	S	М	-V
STR NH205	1	М	0	T	S	Ε	٠٧
TAGRA	8	2	6	4	1	М	-V
TEGUI GL	3	4	2	1	5	М	-٧
TEGUI HORIZON	3	4	2	1	5	ΜE	-V
TELEVES	4	2	3	T	1	М	٠٧
TESLA DDZ 85	1	2	3	4	6	М	-V
TESLA DDZ 93	Z	2	3	4	6	М	٠٧
TUNE	8	2	6	4	1	М	-V
URMET 730/1	6	2	9	7	1	М	٠٧
URMET DOMUS 1131 - 1132 - 1133	9	2	6	CA	1	Ε	٠٧
URMET DOMUS 1130	9	2	10	7	1	М	٠٧
URMET DOMUS 1134	9	2	6	CA	1	Ε	٠٧
VIDEX	5	1	3	4	2	Ε	-V
VIDEX	5	1	7	6	2	М	٠٧
YUS PHONE	EL	T	-	B/PT	R	М	-V

www.intercomsrus.com

WIRING DIAGRAM Comelit 2402W-2405W 1 Way 5 Wire

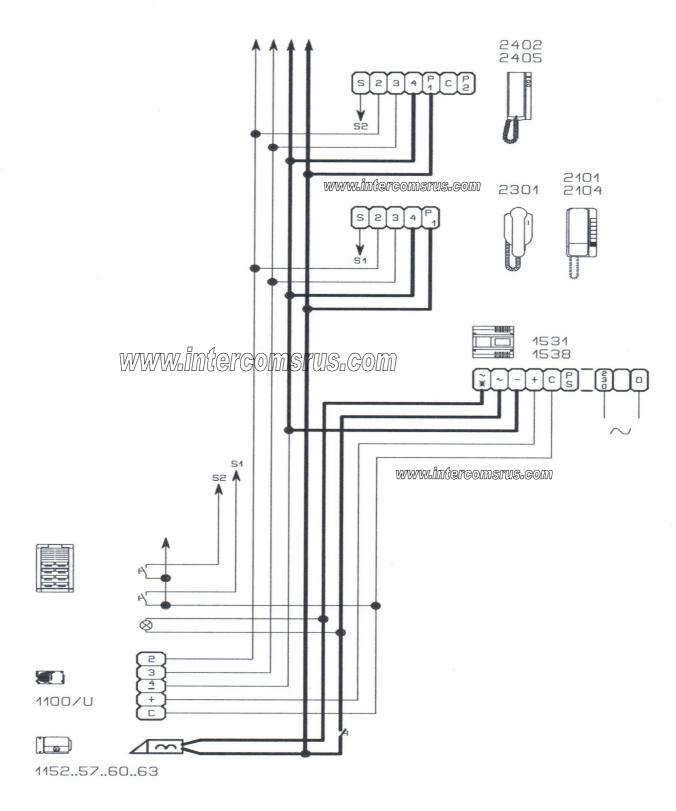

WIRING DIAGRAM Comelit 2402W-2405W 2 Entrance 5 Wire

